
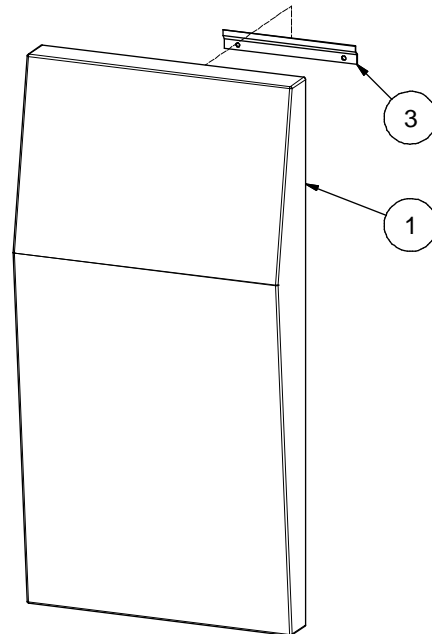
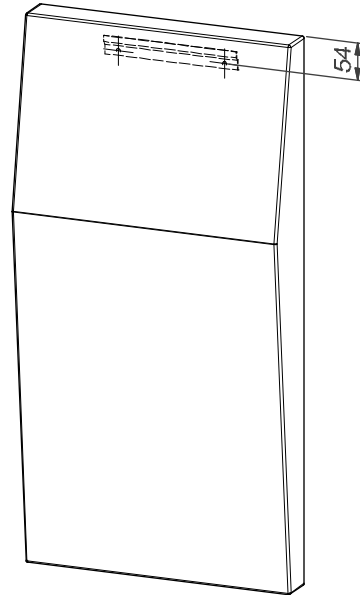
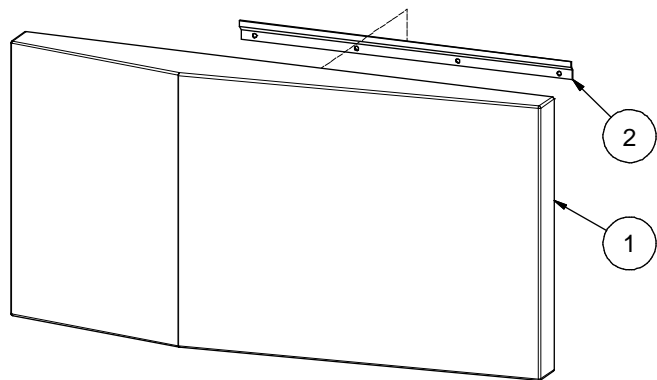
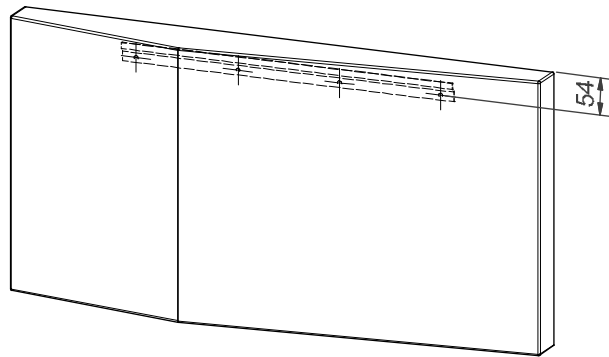


Triline

Väggabsorbent

Monteringsanvisning
Montageanweisung
Assembly instruction

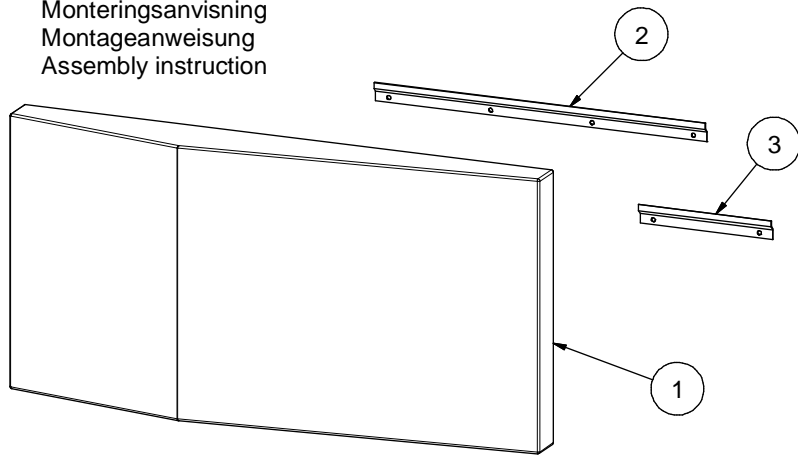

Kombinationsexempel
Beispiel Kombination
Combination examples

