


## Styles



Square



Rectangle

## MuffleArt

This acoustic wall panel is like no other, not only does it provide a class A acoustic performance, but it also offers a unique artistic approach to better the aesthetics of your space. There are several designs, sizes, and colours to choose from to create the perfect blend of improved acoustics and interior décor.

### Advantages:

- High-performance sound absorption (Class A)
- Modern & unique designs
- Outstanding print quality
- Available in a range of sizes

# Product Specifications

## Fire

MufflePrint core board has been tested and offers Class O fire rating to BS476: Part 6. Fabric facing complies with Class 1 to BS476: Part 7.


## Weight

- 600 x 600 (mm) – 1.44kg/m<sup>2</sup>
- 1200 x 600 (mm) – 2.88kg/m<sup>2</sup>
- 1200 x 1200 (mm) – 5.76kg/m<sup>2</sup>
- 1200 x 1800 (mm) – 8.64kg/m<sup>2</sup>
- 1200 x 2400 (mm) – 11.52kg/m<sup>2</sup>

Please note: All weights are given as approximations

## Acoustic Performance


Sound Absorption | Up to 'Class A'  
Noise Reduction Coefficient | 0.90 (90%)

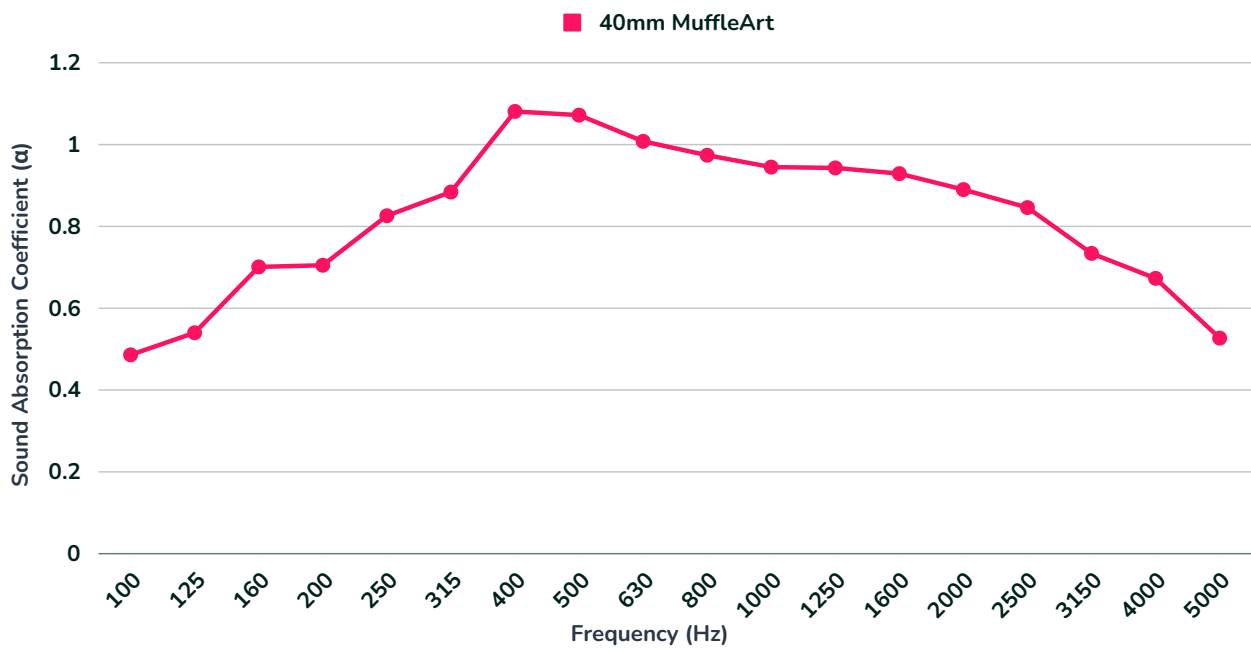

MuffleArt Absorption Coefficient Table


Frequency (Hz)	100	125	160	200	250	315	400	500	630	800	1000	1250	1600	2000	3500	3150	4000	5000	NRC
40mm MuffleArt	0.486	0.540	0.701	0.705	0.826	0.884	1.081	1.072	1.008	0.974	0.945	0.943	0.929	0.890	0.846	0.734	0.673	0.527	0.90

# Product Dimensions

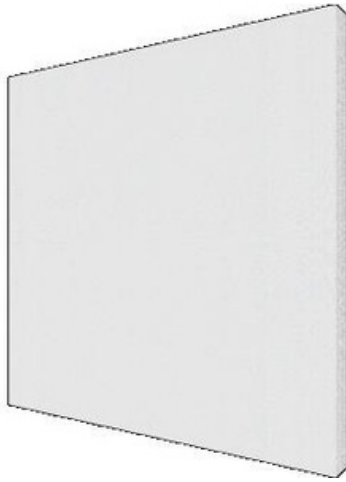

## Square

600 x 600 x 40 (mm)  
1200 x 1200 x 40 (mm)

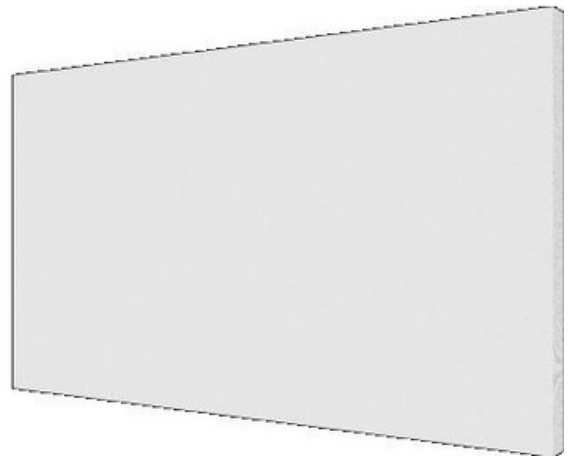

## Rectangle

1200 x 600 x 40 (mm)  
1200 x 1800 x 40 (mm)  
1200 x 2400 x 40 (mm)







# Installation

Rotofast Snap-On anchors for wall panels.



## Rotofast Snap-On parts

Everything you need to install a panel in 5 easy steps.



## Step 1

Screw Rotofast Snap-On Anchors into the back of the panel using the Rotofast driver tool.




## Step 2

Insert marking plugs into the Snap-On Anchors.



## Step 3

Push panel against wall to mark anchor locations.

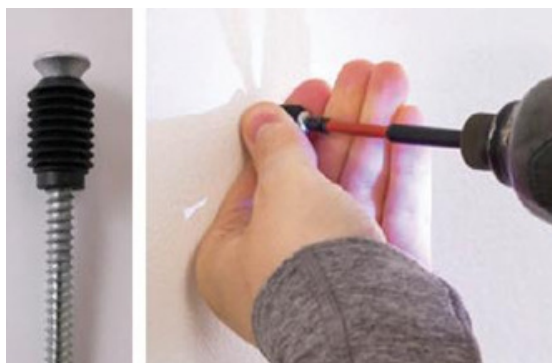

## Step 4

Screw ratchets to wall at marked locations (#8 screw recommended). Flat end of ratchet goes against the wall, curved end faces out. Plugs in the wall are recommended if studs cannot be picked up.



## Step 5

Firmly push panel onto ratchets to complete installation.

# Product Care

## Delivery, Storage & Handling

Keep MuffleArt panels away from damp and moisture when storing and handling.

## After Care

Little aftercare is needed with MuffleArt panels. Using a dry cloth, give the panels a light dusting to keep them looking clean and fresh.

## Supplier

[fi.muffleacoustics.com](http://fi.muffleacoustics.com)

[hello.fi@muffleacoustics.com](mailto:hello.fi@muffleacoustics.com)

+358 (0) 80 041 38 53

Note: Product MUST be checked for colour shading differences, flaws, defects or damage prior to installation. Once installation has been commenced, the products are deemed to have arrived in perfect condition – any of the above reported after installation will not be covered by your warranty.